




# REMINDER



## Compressed Gas Cylinders

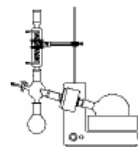

All compressed gases (> 40 PSI) in cylinders of any size must be stored and transported according to the following requirements:

- Cylinders that are not in use **MUST** have a protective valve cap.
  - ⇒ Protective valve caps **MUST** fit the cylinder and be in place before the cylinder is moved for any reason.
  - ⇒ After you have removed the regulator on empty cylinders you **MUST** replace the protective cap.
  - ⇒ Cylinders **MAY NOT** be left in storage areas without protective caps. If there are none present call EH&S for assistance.
- Cylinders **MUST** be secured and upright at **ALL** times.
  - ⇒ **CHECK** your cylinder storage areas immediately and secure any unsecured cylinders.
  - ⇒ Cylinders **MUST** be transported using a cylinder cart and **MUST** be secured to the cart. (Do not use a lab cart.)
  - ⇒ When changing cylinders you **MUST** secure the cylinder as soon as it is moved into position.
  - ⇒ Cylinders that do not have permanent securing devices installed where they are used **MUST** be secured using alternative methods. Call EH&S for assistance.

### QUESTIONS?

Contact: Chris Kohler

IU Chemical Hygiene Officer

Phone: 812-855-5454 E-mail: cekohler@indiana.edu